



***Clamping for
Special Cars
Catalog***



B106 Standard clamp




Replacement parts

for rocker panel clamps

← 91007 75mm side bolt
91302 Black Washer
91611 Black Nut
99203 Spring
131-010-8135 Teeth

← 91012 110mm lower bolt
91318 Silver washer
91610 Silver Nut

B110 Fast clamp

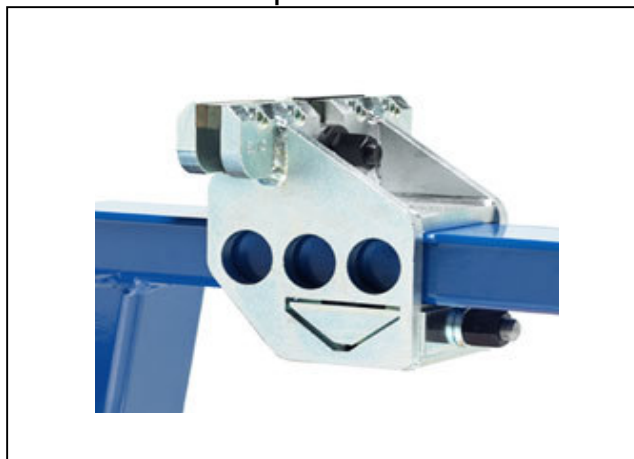

← 91074 100mm side bolt
91302 Black Washer
91611 Black Nut
99203 Spring
131-010-8197 Teeth

← 131-010-8143 Bottom bolt
91318 Silver washer
91611 Black Nut
131-010-8169 Wedge threaded


B639 Speed Clamp



← 91235 55mm side bolt
91644 Side nut
131-010-8135 Teeth
91302 Black Washer

← 138-010-8104 Bottom bolt
91611 Bottom nut
91302 Black Washer

B223 Honda Clamps

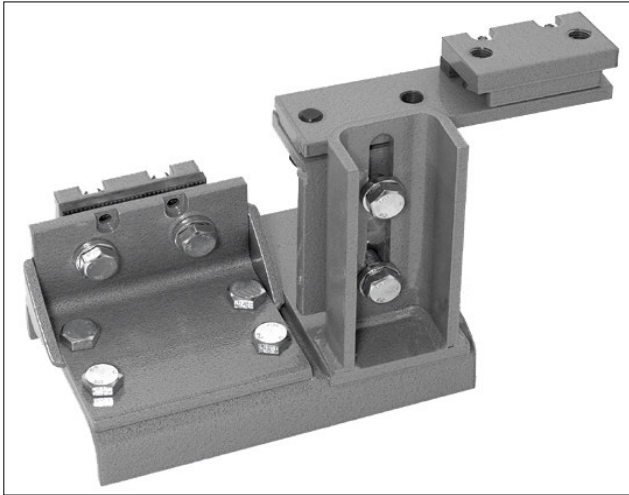

Specialty Clamping

Fits


Honda - Acura

1997-2003

Standard B106 or B110 clamps can be used on light hits during those model years.



B330 Mercedes Clamps -

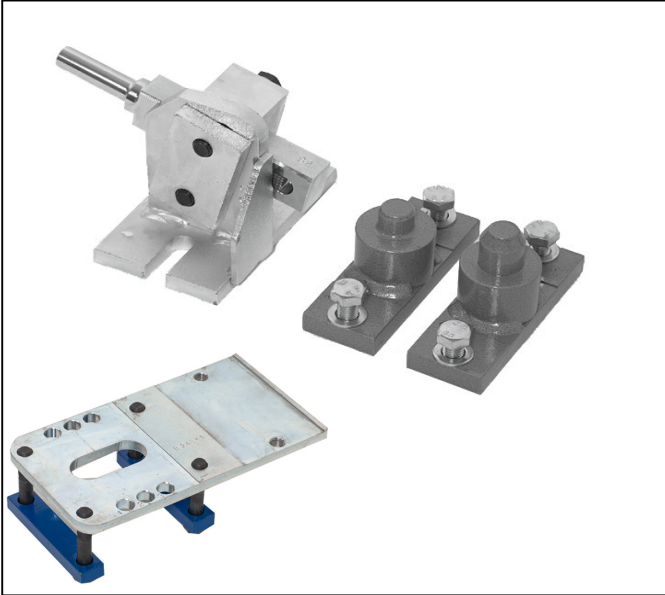

Rentals Available

Required on most mercedes models.


2 sizes on base fixture.

A2 for newer models

A3 for older models



B333 Corvette Clamps

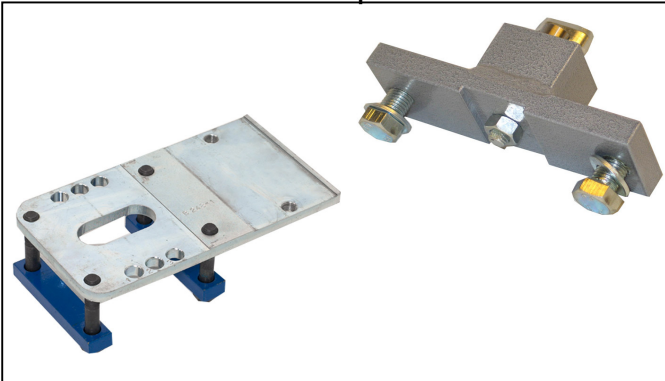

Rentals Available

Fits

Corvettes from

1997- ...

Cadillac XLR

2004- ...

Honda Insight

2000-2006

Pontiac Solstice Roadster

2006-

Saturn Sky Roadster

2007- ...

Opel GT Roadster

2006- ...



B331 Complete BMW Clamps




Rentals Available

Fits

Required on **older** BMW models.



B248 A-1 BMW Clamps

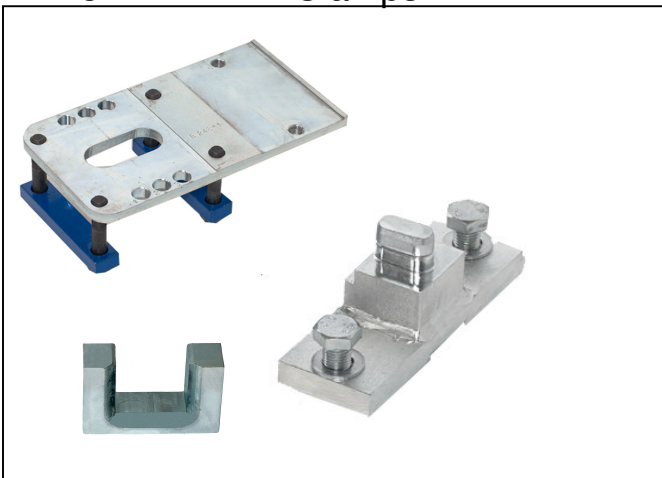

Rentals Available

Fits


Required on **newer** models
without side shaft holes in rockers.



B148 Wedge Kit



B246 Wedge

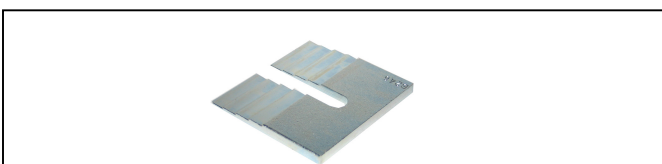

Used on **Slanted** Pinchwelds

Fits


Toyota Rav 4	2001-2005
Toyota Previa van	1991-1997
Toyota Harrier SUV	1998-2002
Lexus RX 300	1999-2003



Fits

Chevrolet mini vans	1990-2004
Toyota Sienna van	1998-2003
VW Jetta	1993-1998

B241 L and R Porsche 911

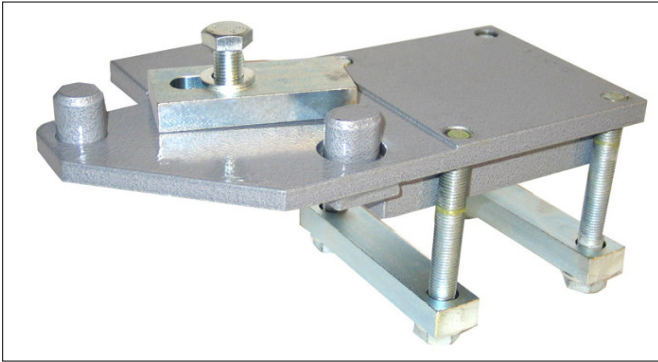

Rentals Available


Fits

Porsche 911 1994-1998

Newer models use standard rocker panel clamps.



B262 Audi and Lamborghini

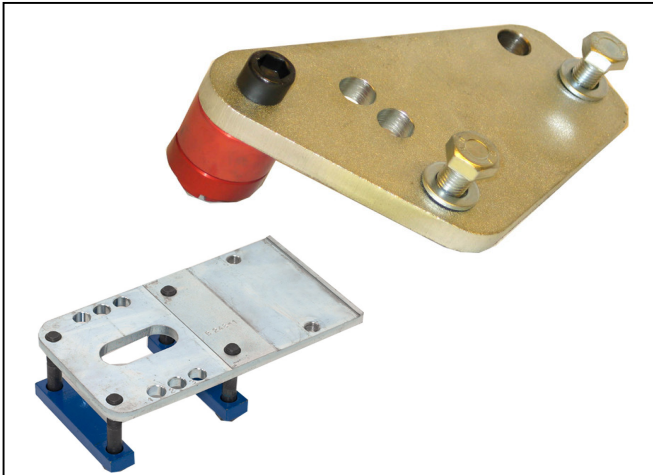


Rentals Available

Fits

Audi Alum. A2	2000-2003
Audi Alum. A8	2004-
Audi Alum TT	2006- ...
Lamborghini	2006- ...



B263 + B275 Ferrari, Porsche, Audi, Maserati, VW

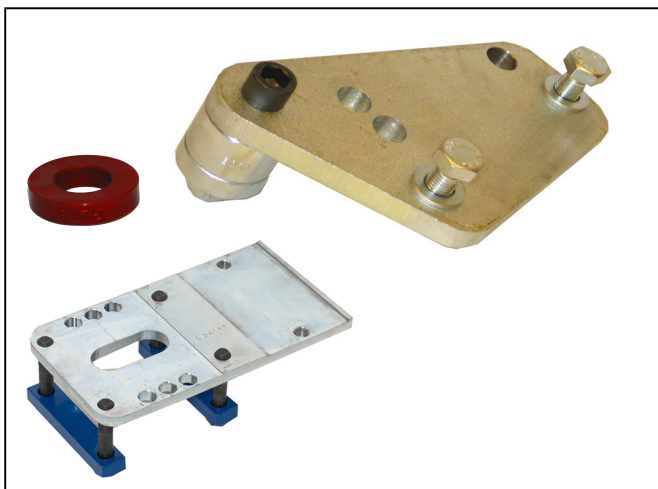


Rentals Available

Fits

Ferrari	1989-2004
Maserati	2004- ...
Audi SUV Q7	2005- ...
Porsche Cayenne	2003- ...
VW Toureg SUV	2003- ...




B332 Audi Aluminum A8

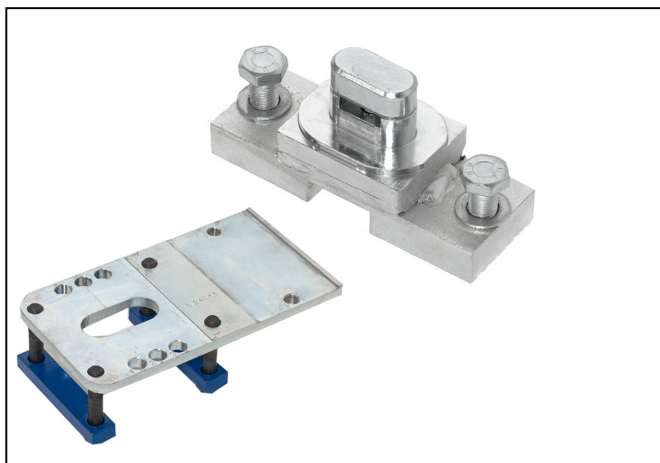

Fits

Audi Alum A8

1995-2004

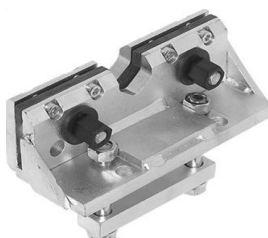

The B106 Base is the standard clamp which accepts the backing plates shown below


Backing Plates

(Optional)

Used on certain vehicles to avoid crushing metal protrusions or parts.

[Rentals Available](#)

B245

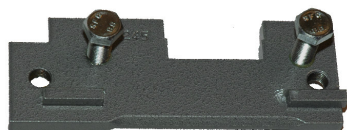


Needs B106 base

Fits

Audi A4	2002-2005
Chrysler PT Cruiser	2005- ...
Infiniti G35,M40	2002- ...
Subaru (certain models)	1993-2003
Mercedes R 320-500	2006- ...
Volvo C70	2006- ...
Mitsubishi Galant	2004- ...

B264

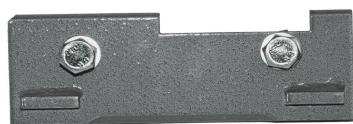


Needs B106 base

Fits

Audi A3	2006- ...
Audi A6	2004- ...
Hyundai Sonata	2005- ...
Kia Optima	2006- ...
Subaru Outback	1997-2000
Volvo S40,S60,S80,	Various years
Volvo V50	2003- ...

B273

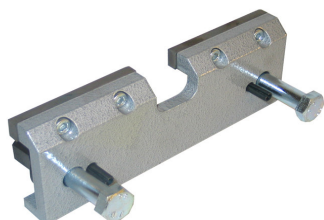


Needs B106 base

Fits

Saab 9-3 Conv.	1995-2004
Bentley Arnage	2005...

B274

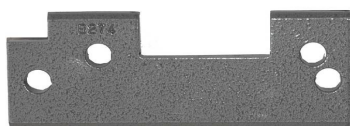


Needs B106 base

Fits

Audi A3	2006- ...
Mazda Vans	2005- ...
Mercedes E200-500	2005- ...
Saturn Vue	2008- ...
Volvo C30	2006- ...
Volvo S40, V50	2003- ...

B277

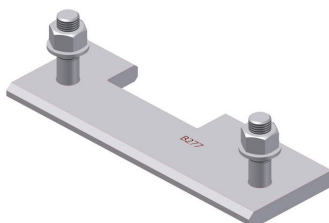

Fits

VW Passat	2005-
Suzuki Swift	2004-